

# Chromebook Quick Help

## WiFi Setup



### Network not available


Please connect to the Internet to sign in to your Chromebook.  
If you've already registered on this device, you can [sign in as an existing user](#).

Select your home WiFi Network.  
Type in your password.

OR



Click on the icon by the clock.

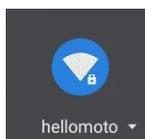

Click on the WiFi icon and select your WiFi.

If you are still having trouble, try the following steps:

- Restart your Chromebook.
- Try connecting to your home Wi-Fi network again.
- Ensure that you are entering the correct Wi-Fi password.

## Support



- Only RCSD students and staff can log into Chromebooks.
- Each **RCSD Student** should log into their own Username and Password.
- RCSD filters are in place and are being monitored.
- Lost, stolen, or damaged Chromebooks are to be reported immediately to the call center below.
- Need help with your **password**, call the number below.

**(585) 262-8700**

## Basic Chromebook Rules



Charge the Chromebook before use.



Keep food and drinks away from the chromebook.



Always carry the chromebook closed with two hands.

## Chromebook Login

Username: Student ID#

Default Password (birthdate): MMDDYYYY


## ROCONNECT

for all your RCSD apps

1. Click on the Home icon for the Roconnect login page.



2. Click on Sign in with Google.

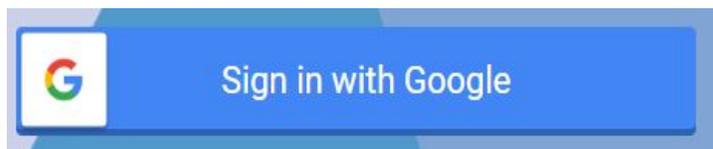

**Parents and Guardians: Go to [www.rcsdk12.org/RCSDLearns](http://www.rcsdk12.org/RCSDLearns)**

On RCSD Learns, you will find additional resources including:

Weekly educational resources, tech help guides, information regarding meals sites, and more!